


- CH LIST**
- 1:BACK#N/C
 - 2:BACK#RED
 - 3:BACK#BLUE
 - 4:BACK#AMBER
 - 5:BACK#DARK BLUE
 - 6:WASH#DARK BLUE
 - 7:SIDE#LAVENDR
 - 8:DR TOP
 - 9:下手TOP
 - 10:VO TOP
 - 11:上手TOP
 - 12:フロア-追加用
 - 13:CL#N/C
 - 14:CL#RED
 - 15:DJ TOP
 - 16:看板当て

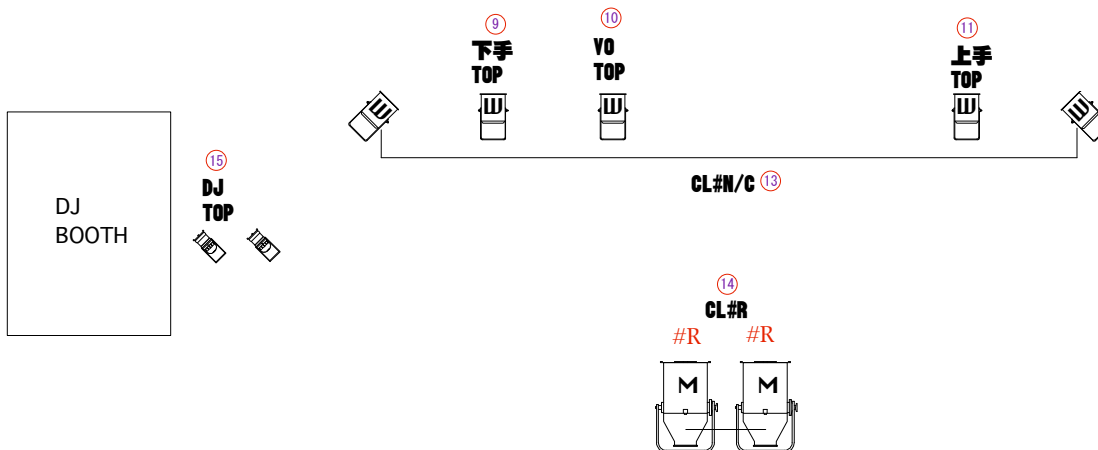

新宿レッドクロス

<KEYS>

PAR64<500w Narrow> x 4
 PAR64<500w Midium> x 2
 PAR36<300w Narrow> x 14
 PAR36<300w Wide> x 7
 PAR16<100w Wide> x 4

<可動機材>

PAR36<300w Wide> x 2
 (ベース付き)

〒160-0022

東京都新宿区新宿6-28-12

DS新宿ビルB1

TEL:03-3202-5320/FAX:03-6380-1920